
625-4132


REPLACEMENT REBUILD KITS

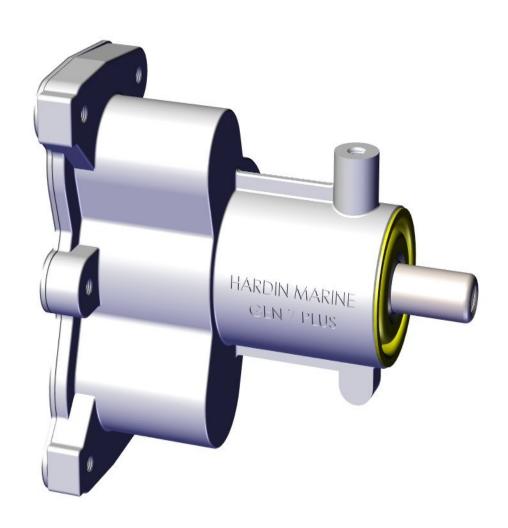

REPLACEMENT REBUILD KITS


HARDIN MARINE ADVANTAGE

- 316 STAINLESS STEEL POLISHED BODY.
- INTERNAL WEAR PLATE DESIGN PROVIDES A LIFETIME OF SERVICE.
- EXTERNAL WEAR PLATE ALLOWS STOCK REAR COVER TO BE REUSED REGARDLESS OF PREVIOUS WEAR DAMAGE.
- 20% LARGER PUMP SHAFT ACCEPTS MOST POPULAR AFTERMARKET & MERCRUISER IMPELLERS
- 40% LARGER BEARINGS FOR INCREASED LONGEVITY.
- DUAL SHAFT SEALS WITH WATER WEEP HOLE.

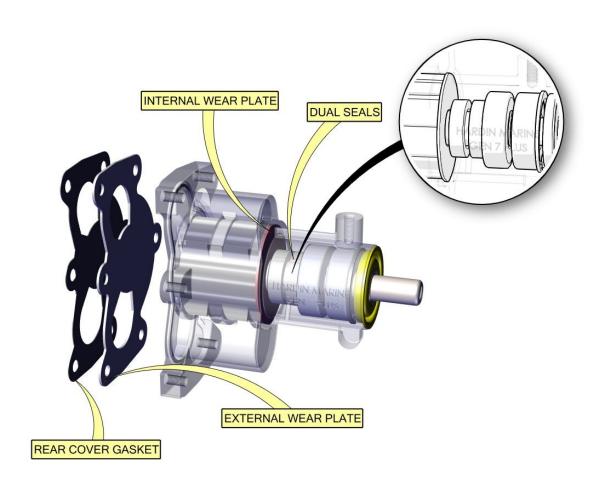


625-4132

REPLACEMENT REBUILD KITS

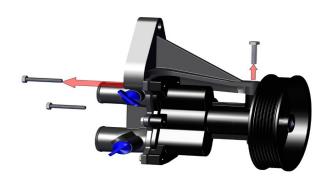


Step 1

- 1. Remove the belt.
- 2. Remove both hoses from the pump.
- 3. Using a 10 mm socket, remove the 3 bolts as shown.

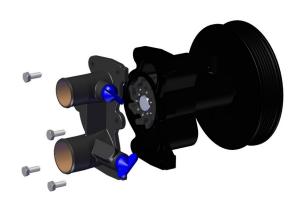

Step 2

- 1. Using 10 mm socket remove the remaining 4 bolts as shown.
- 2. Save the rear cover.

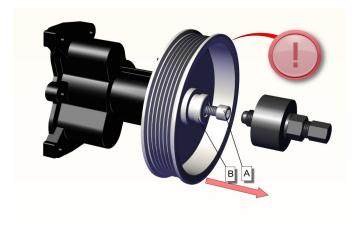


Step 3

- 1. Install 3/8-16 socket cap screw into the shaft, Fig A.
- 2. Using OTC-7185 remover. Attached to groove in the pulley, Fig B.
- 3. Never pull on the outside diameter of the pulley.`


625-4132

REPLACEMENT REBUILD KITS

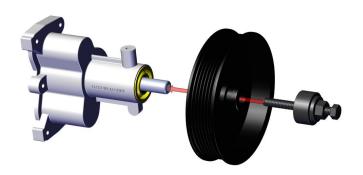


Step 4

- 1. Screw OTC-7209 installer into the shaft.
- 2. Apply grease to the shaft.
- 3. Install pulley to the same position that it was installed on the stock pump.

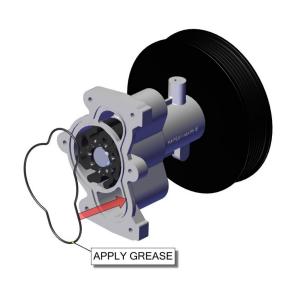

Step 5

- 1. Apply white lithium grease to the o-ring and install into the new pump housing groove.
- 2. Apply white lithium grease to the end of the impeller.

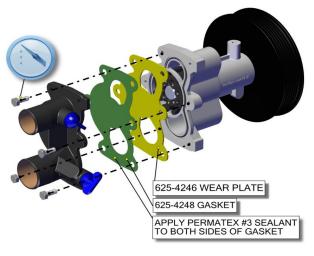


Step 6

- 1. Apply Permatex #3 sealant to both sides of gasket, as shown.
- 2. Apply anti-sieze to the 4 rear cover bolts.
- 3. Install rear cover, gasket & wear plate as shown.
- 4. Lightly tighten the bolts.


625-4132

REPLACEMENT REBUILD KITS

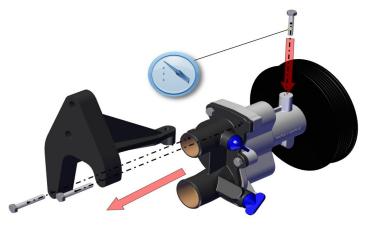

Step 7

- 1. Apply anti-sieze to the remaining 3 bolts.
- 2. Install pump as shown.
- 3. Torque all 7 bolts to 6 ft. lbs..

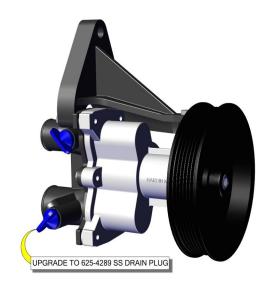


Step 8

- 1. Attach hoses and belt. Check belt alignment.
- 2. As a preventive maintenance, replace the plastic Mercury drain plugs with Hardin stainless steel drain plugs.


625-4132

REPLACEMENT REBUILD KITS

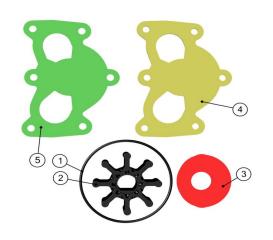

625-4203 STANDARD REBUILD KIT

#	PART #	DESCRIPTION	QTY
1	625-1053	O-RING	1
2	625-4080	IMPELLER	1
3	625-4245	WEAR PLATE-INT.	1
4	625-4246	WEAR PLATE-REAR	1
5	625-4248	GASKET	1

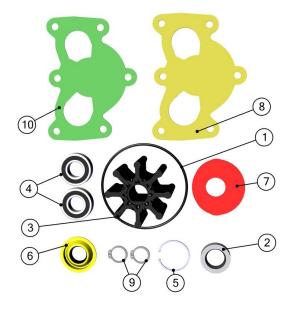

625-4133 MASTER REBUILD KIT

#	PART#	DESCRIPTION	QTY
1	625-1153	O-RING	1
2	625-4005	SEAL	2
3	625-4080	IMPELLER	1
4	625-4302	BEARING	2
5	625-4305	SNAP RING	1
6	625-4304	SEAL	1
7	625-4245	WEAR PLATE-INT	1
8	625-4246	WEAR PLATE-REAR	1
9	625-4302	SNAP RING	2
10	625-4248	GASKET	1