

SINGLE HANDLE N-CONTROL

The 620-60220 N-Control shifter is designed as a single lever single function control for shifting of the forward and reverse gears only. It is not intended in any way to be used for the operation of the throttle functions.

Shifter Mounting

To start the installation determine the location for the shifter taking care that you will have room for the full movement of the lever in all directions.

The installation in a new application is made by drilling a 3 3/8" hole with a hole saw in the side panel.



Remove the rear retaining plate from the shifter and then slide the shifter thru the hole until flush on the panel.







After making sure the plate is straight and level mark the 4 holes thru the outer plate and drill using a 1/4" drill bit.



Now slide the rear retaining plate on the back side of the panel and install using the 4 counter sunk screws removed in a previous step. Tighten until the shifters inner and outer plates are pulled tight to the panel.

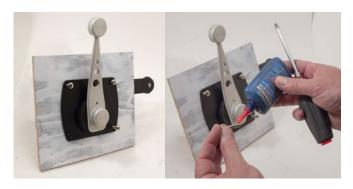

(Note: Use loctite on these screws to prevent them from coming loose in operation)

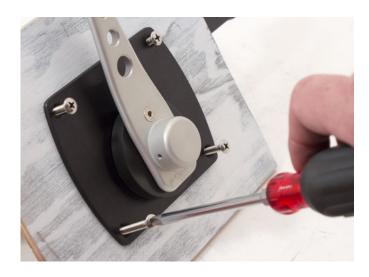



SINGLE HANDLE N-CONTROL

Cable Mounting

The cable can be installed before or after the shifter has been mounted depending on the amount of room available in the desired mounting location. The N-Control shifter will work with the standard 33c style cable or the Mercury Gen II cables as purchased. If you are using the older KM cable then you must purchase the 620-60210 adapter seperatly that allows this cable to mount to the bracket.



The cable can enter from the rear, front, or the bottom of the shifter and push or pull the cable from these installation points. See pictures below. (Note: Use loctite on all mounting screws to prevent them from coming loose during operation)




The 33c cable will use the rod end attached to the shift arm and the clamp on the pivot disc then just adjust as needed for smooth gear operation.

The Mercury II cables attach to the shift arm using the provided shoulder bolt and washer and the clamp on the pivot disc. Adjust as needed for smooth gear operation.



Neutral Safety Switch

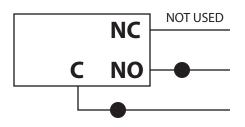

MARINE MARINE \triangleright R6.47 1.50 www.hardin-marine.com SUPPLIED WITH (4)10-24 x 1-1/4 MOUNTING SCREWS AND BACKING PLATE SINGLE LEVER N-CONTROL 11 Industry Dr. Palm Coast, FL 32137 386-445-2500 / FAX 386-445-1122 1.13 4.58 6 ➂ 45° 3.75 000 4.87 45° 4.58 2.12 MININUM NEEDED INSIDE GUNNEL 3.25 4.00 PART NO. 620-60220 1.83 SUPPLIED WITH 151-09380 33C ROD END III BRACKET CAN BE ROTATED EVERY 90°. MAKE SURE TO LOCTITE ALL BOLTS REFERENCED BY FIGURE A. \triangleright \triangleright \triangleright 0 0 **(** 0 0 7.82 0 2.30 \triangleright ➣

HARDIN 11 Industry Dr. Palm Coast, FL 32137 MARINE 386-445-2500 / FAX 386-445-1122

PART NO. 620-60220

SINGLE LEVER SIDE MOUNT CONTROL CUTOUT TEMPLATE

www.hardin-marine.com

TEMPLATE USAGE:

1) TAPE TEMPLATE TO MOUNTING POSITION. USE THE OUTSIDE PROFILE TO INSURE CONTROL HAS FLAT MOUNTING SURFACE.

2) DRILL OUT CENTER HOLE WITH A \emptyset 3-3/4 HOLE SAW.

3) DRILL THE (4) \emptyset 7/32 MOUNTING HOLES.

4) DEBURR ALL HOLES PRIOT TO INSTALLATION.

5) DO NOT USE SCALING OPTIONS WHEN PRINTING TEMPLATE!

