


LED SENSOR INFO BY

MAYFAIR


PERFORMANCE

The Dash Panel when activated with 12 volts, will cycle through all of the LED lights for 2 cycles. After the 2 cycles are complete, the LED light will be illuminated at the location of the trim of the tabs or the drives.



If the light flashes on either side of the dash panel and is not a solid color, this means that it does not have a signal from the sending unit. If the lights are solid, it has the signal, and will move up or down when the trim or the tabs location is changed.

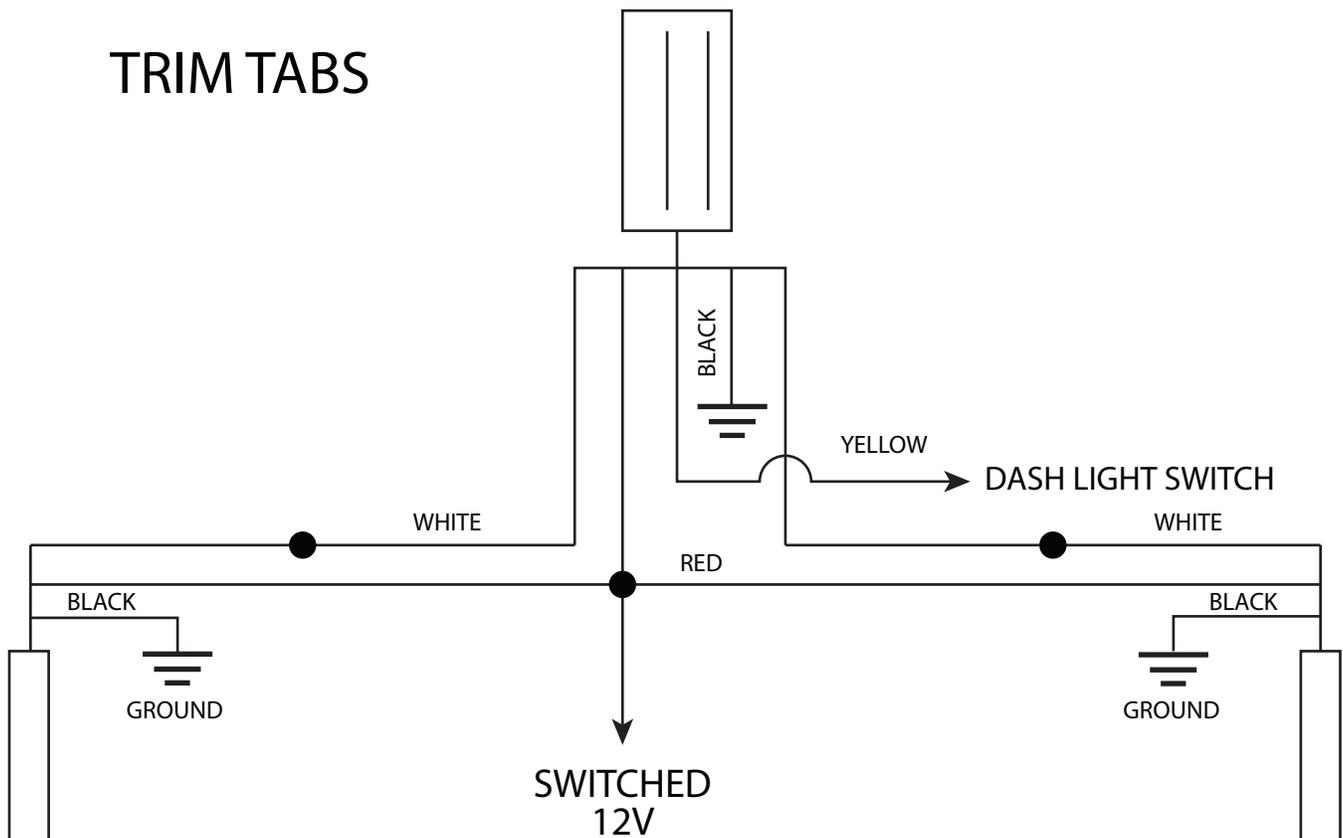

SINGLE BRAVO INSTALLATION

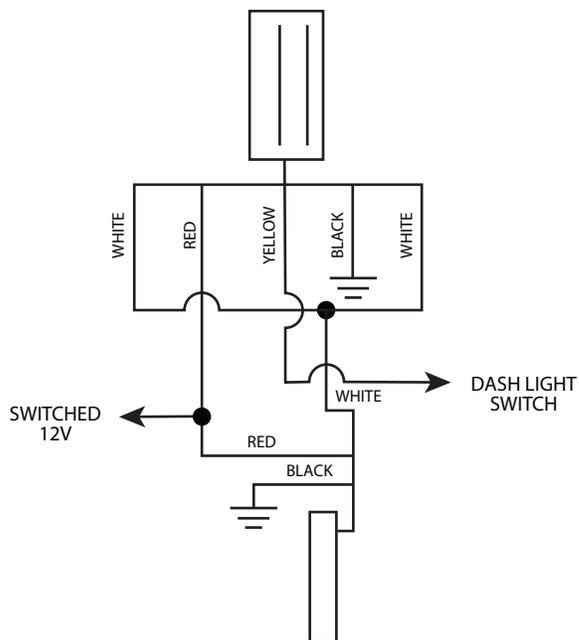


DUAL DRIVES AND TABS

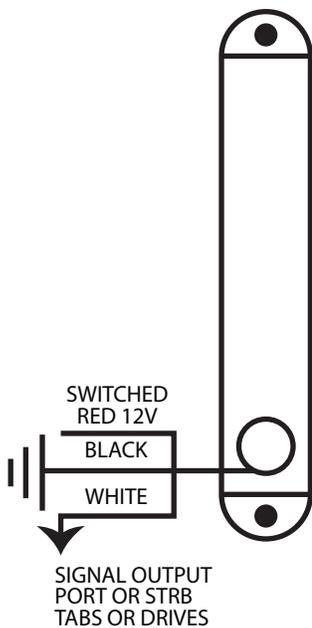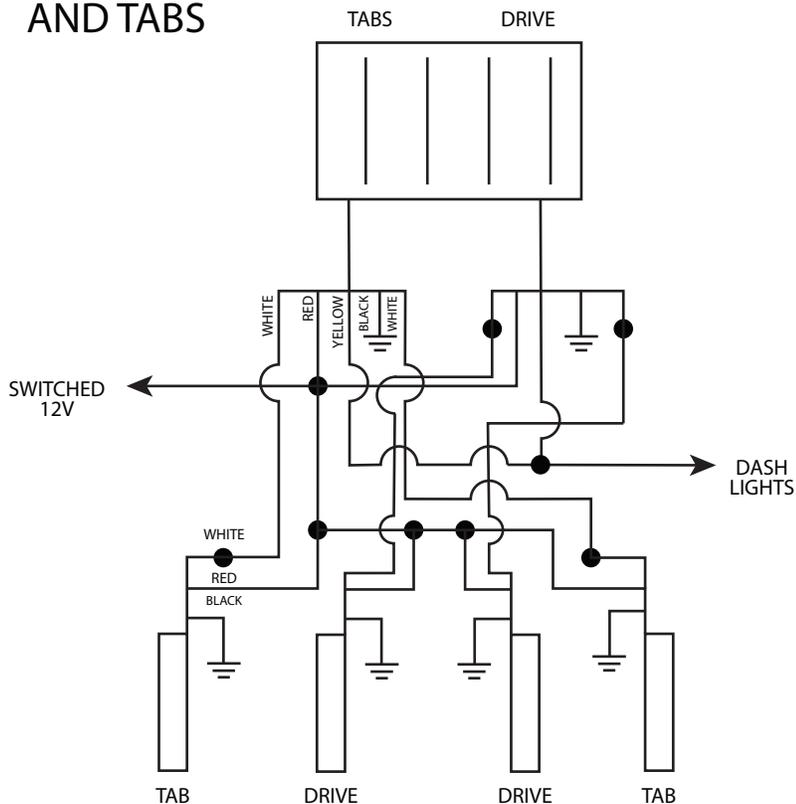

- *Red Wires connect to switched 12 Volt 5 amp fuses
- *Black Wires connect to Ground
- *White Wires are signal out and signal in, and connect to each other
- *Yellow Wires connect to dash light switches. The LED light on panel will dim when connected to 12 Volts.

*NOTE: 18 GA Wire for harness

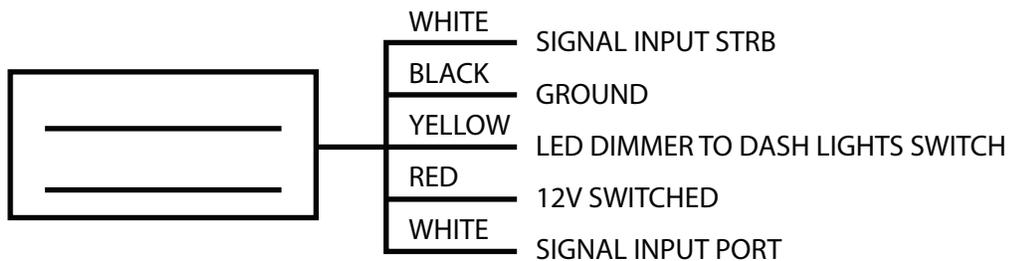

MAYFAIR PERFORMANCE


PART NO.
137-8414/
137-8428

TITLE: GENERATION 1 VERSUS 2 TRIM INDICATORS COMPARISON

www.mayfairperformance.com

WARNING:
ATTACHING POWER TO ANY OTHER WIRE THAN THE RED OR GREY WIRE WILL PERMENANTLY DAMAGE THE SENDER AND DASH PANEL.


GENERATION 1
137-8413 DASH PANEL 01/22 AND EARLIER
137-8428 TRIGGER SENDER 06/22 AND EARLIER

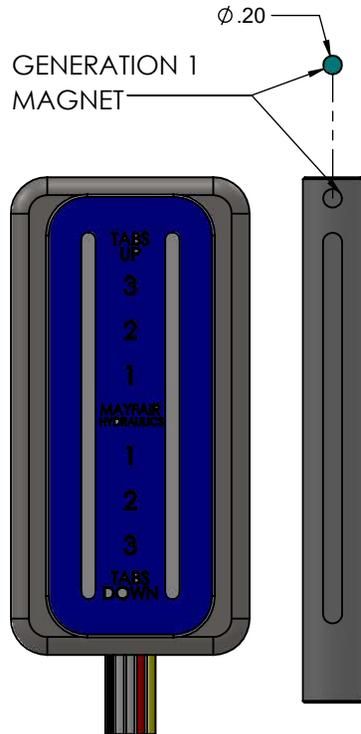


GEN 1 WIRING
BLACK: GROUND
WHITE: SENDER OUTPUT
RED: 5 TO 12 VOLTS



GENERATION 2
137-8413 DASH PANEL 01/22 AND LATER
137-8414 TRIGGER SENDER 06/22 AND LATER

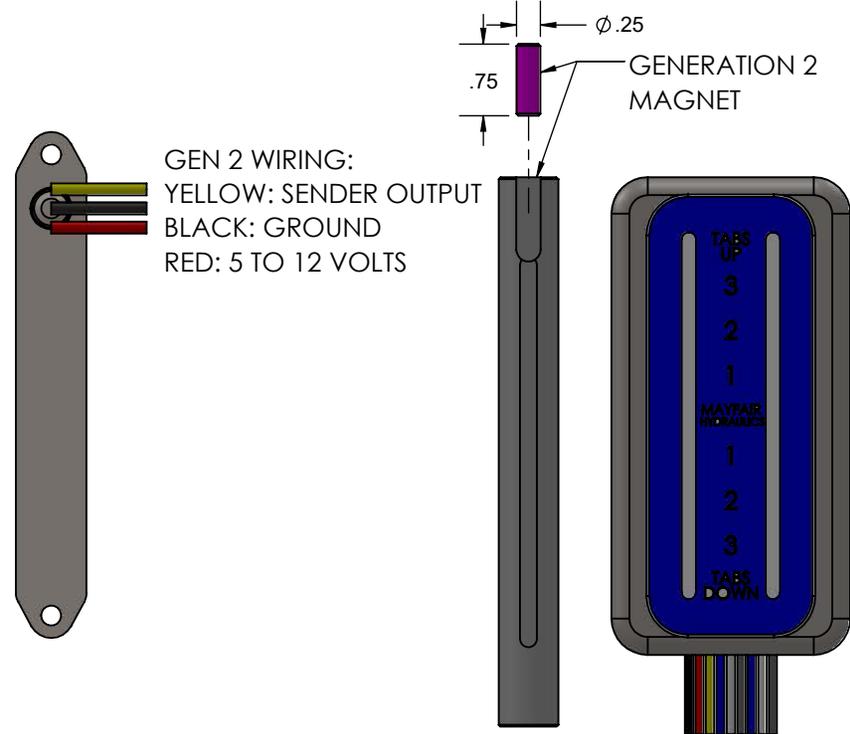

GEN 2 WIRING:
YELLOW: SENDER OUTPUT
BLACK: GROUND
RED: 5 TO 12 VOLTS

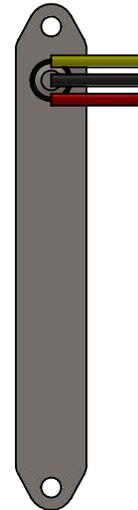

GEN 1 PANEL WIRING:
BLACK: GROUND
RED: 12 V/ 5AMP FUSED POWER
WHITE: SENDER INPUT
YELLOW: DASH LIGHTS

GEN 2 PANEL WIRING:
BLACK: PANEL GROUND
RED: 12 V/ 5AMP FUSED POWER
YELLOW: DASH LIGHTS
BLUE: SENDER GROUND
WHITE: SENDER INPUT
GREY: 5 VOLT POWER
BLUE: SENDER GROUND
WHITE: SENDER INPUT
GREY: 5 VOLT POWER

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.

MAYFAIR PERFORMANCE

PART NO.
137-8414

TITLE:
TRIM SENDER - GEN 2

www.mayfairperformance.com

DASH PANEL TO SENDER WIRE COLOR CODE:

- 1) BLACK - GROUND
- 2) RED - 12V/ 5AMP FUSED KEYED POWER
- 3) YELLOW - DASH LIGHTS
- 4) BLUE - PORT SENDER BLACK & BLACK (GROUND)
- 5) WHITE - PORT SENDER YELLOW (SEND)
- 6) GREY - PORT SENDER RED (POWER)
- 7) BLUE - STBD SENDER BLACK & BLACK (GROUND)
- 8) WHITE - STBD SENDER YELLOW (SEND)
- 9) GREY - STBD SENDER RED (POWER)


OPTIONAL 137-8684 HARNESS KIT COMES WITH:

- (2) 30' SENDER HARNESS (GREY, BLUE AND WHITE)
- (1) 30' RED WIRE
- (1) 5AMP FUSE AND HOLDER
- (20) BUTT CONNECTORS

USED IN 137-8681, 137-8682, 137-8683, 137-8688 & 137-8737 KITS 06/2022.

ADJUSTING THE LED LIGHT RANGE:

- 1) MOVE TO DRIVE/TAB ALL THE WAY DOWN.
- 2) BOTH SENDERS MUST BE WIRED AND THE BOTTOM LIGHT ON BOTH SIDES MUST BE LIT.
- 3) DEPENDING ON THE KIT, YOU WILL EITHER ADJUST THE END SCREWS OR SLID THE ASSEMBLY TO GET THE BOTTOM LIGHT ON THE DASH TO ILLUMINTE.
- 4) MOVE THE DRIVE/TAB ALL THE WAY UP.
- 5) USING 1/16 ALLEN KEY, REMOVE THE BACK COVER.
- 6) USING THE PROVIDED SCREWDRIVER, **CAREFULLY** TURN THE ADJUSTMENT ON THE BACK OFF THE LED PANEL ALL THE WAY COUNTER CLOCKWISE. SOME OF THE TOP LED'S SHOULD TURN OFF.
- 7) SLOWLY TURN THE ADJUSTING SCREW CLOCKWISE UNTIL THE THE TOP LED LIGHT BEGINS TO ILLUMINATE. PANEL IS NOW ADJUSTED FOR FULL RANGE. NOW ADJUST THE OTHER SIDE. CYCLE UP AND DOWN A FEW TIMES TO MAKE SURE LIGHTS ARE ADJUSTED PROPERLY.
- 8) REINSTALL REAR COVER.
- 9) 2 SLOT SHOWN. SAME INSTRUCTIONS FOR 4 AND 6 SLOT PANELS.

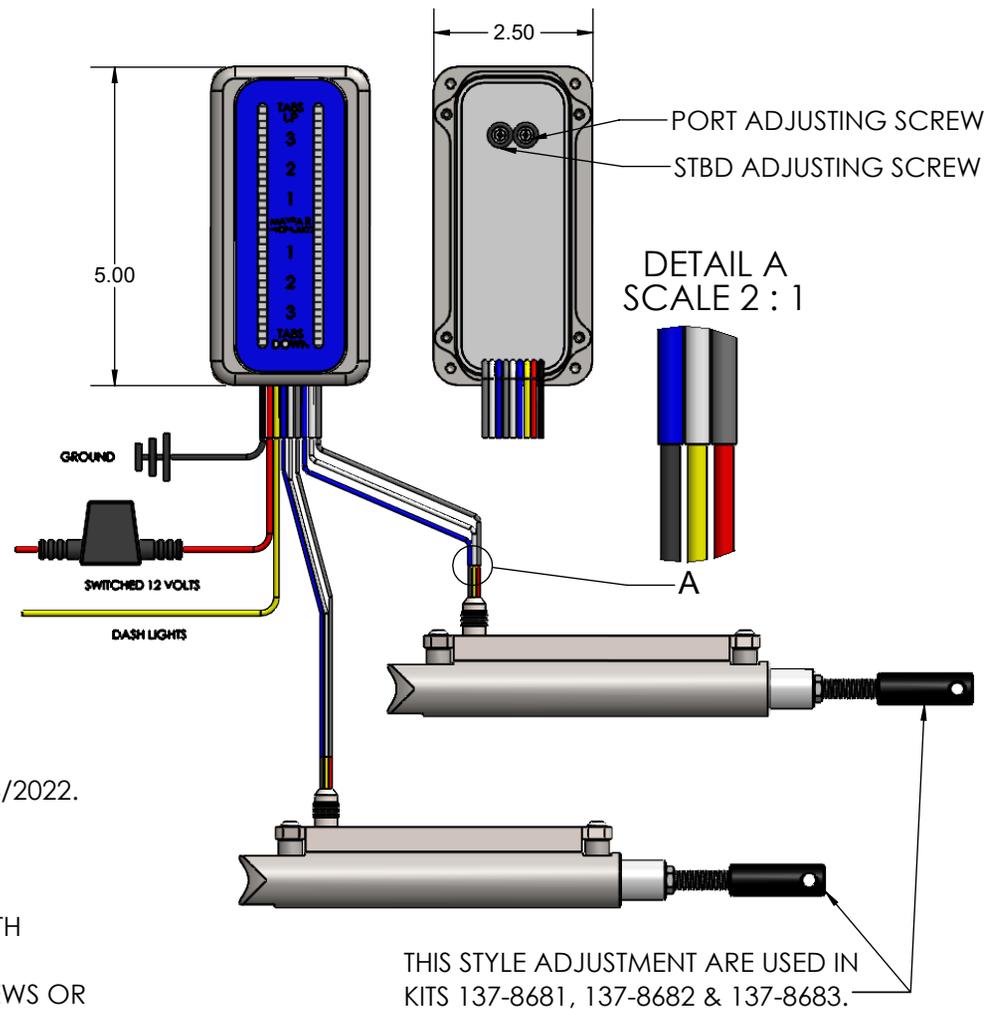

WARNING:
ATTACHING POWER TO ANY OTHER WIRE
THAN THE RED OR GREY WIRE WILL
PERMANENTLY DAMAGE THE SENDER AND
DASH PANEL.

THIS DRAWING IS CONFIDENTIAL AND IS SUPPLIED ON EXPRESS CONDITION THAT IT SHALL NOT BE LENT, COPIED OR DISCLOSED TO ANY OTHER PERSON OR USED FOR ANY OTHER PURPOSE WITHOUT WRITTEN CONSENT OF HARDIN MARINE INC.. BREACH OF THIS CONTRACT WILL HOLD AND IT'S PRINCIPALS LIABLE FOR LOSS AND DAMAGES.