



TWO-PIECE VALVE COVERS

755-843X

Thanks for purchasing our Two-Piece Valve Covers. we do our best to make sure our products are the finest available.

Attach valve cover rails to your heads using the included 14 bolts (7 per side) and a good quality gasket. Tighten bolts to 120-130 in. lbs. Lay the included flat valve cover gasket into the inside of the rail. Install the valve cover o-ring onto your valve covers. Note: This o-ring "Must" be well greased on the outside surface of your valve cover in order for this cover to seal properly. Start to mount your cover by using its attached thumbscrews.

Note: After you have started to tighten down the thumbscrews apply pressure with your hand in the center bottom (This would be the side opposite of your oil inlets) of the valve cover.

Continue to tighten down your thumbscrews. The bottom side of the cover should start to seat first. Once your thumbscrews are hand tight you can finish tightening them down with a half inch socket or wrench. Tighten to 20-25 ft. lbs. Your installation is now complete.