

# HARDIN MARINE


PART NUMBER: 130-1041 and 130-1044

DESCRIPTION:  
SPORT TECH DRIVE SHOWER FOR XR/ITS MERCUISER BRAVO  
OUTDRIVES WITH FINNED CAP

CENTER PUNCH &  
DRILL 9/32 HOLE

TEMPLATE

CENTER PUNCH &  
DRILL 1/2 HOLE

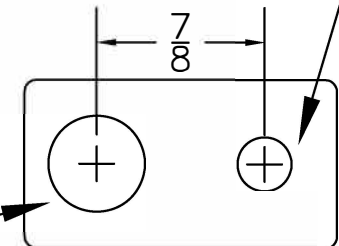

PLACE TEMPLATE EDGE TO  
OUTSIDE EDGE OF CAVITATION PLATE.

(4) 3/8-24x3/4" LONG BOLTS

SHOWER CAP

HEX ADAPTERS

STAINLESS STEEL HOSE

SHOWER CAP INSTALLATION INSTRUCTIONS:  
1) SLIDE HOSE INTO REAR OF THE DRIVE SHOWER. INSTALL MOUNTING CLIP.

2) DO NOT REMOVE THE FACTORY NUTS FROM THE STUDS. SCREW THE HEX ADAPTERS OUT TO THE END OF THE STUDS, TILL THEY BOTTOM OUT WITH THE FACTORY NUTS.

3) PLACE SHOWER CAP ON TOP OF HEX ADAPTERS.

4) INSTALL THE 3/8 BOLTS THROUGH THE TOP OF THE SHOWER CAP. TORQUE BOLTS TO 25 FT. LBS..

5) CUT OUT TEMPLATE AND TAPE TO EITHER THE RIGHT OR LEFT SIDE OF CAVITATION PLATE. IF YOU HAVE A SWIM STEP YOU NEED TO CHECK TO MAKE SURE DRIVE DOES NOT HIT STEP WHEN RAISED, ADJUST POSITION ACCORDINGLY.

6) CENTER PUNCH HOLES AND DRILL 1/2 HOLE THEN 9/32 AS SHOWN IN TEMPLATE.

7) REMOVE BURRS IN DRILLED HOLES.  
8) PLACE HOSE THRU THE 1/2 HOLE AND MOUNT WITH 1/4 BOLT, NUT & WASHER. TORQUE TO 120-125 IN. LBS..

1/4-20 x 3/4" LONG  
BOLT, LOCKING NUT &  
WASHER

BOTTOM CAVITATION PLATE