



Owner's Installation Manual

Cable Adapter Kit Installation

Part Number: 620-30190

Applications: Mercury Outboard Only 40 H.P. to 250 H.P.
Type 33C Morse Red-Jaket Cables Only

NOT INTENDED FOR USE ON MERCUISER STERNDRIVE



5725 Redwood Drive
Rohnert Park, CA 94928
Phone 707-585-9006
Fax 707-585-2935

America's Marine Performance Manufacturer
LEADING THE WAY

1. Remove the jam nut and both seals from the engine end of the cable (see Figure 1 below). Discard the hub seal only.

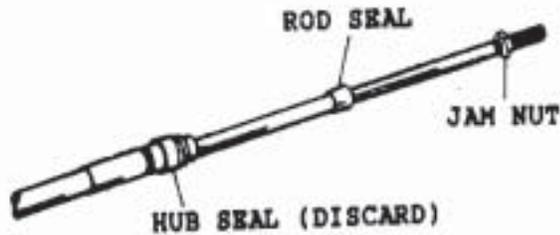


Figure 1

2. Slide the adapter onto the cable sleeve until a slot lines up with the cable hub groove.

Item	Description	Number Required
1	ADAPTER	2
2	CLIP	2
3	TERMINAL	2

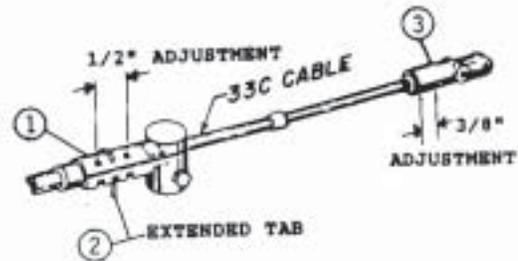


Figure 2

NOTE:

For **shift** connection on all models, use the center slot. See Figure 3.
 For **throttle** connection on all models, use the slot nearest the anchor hole. See Figure 4.

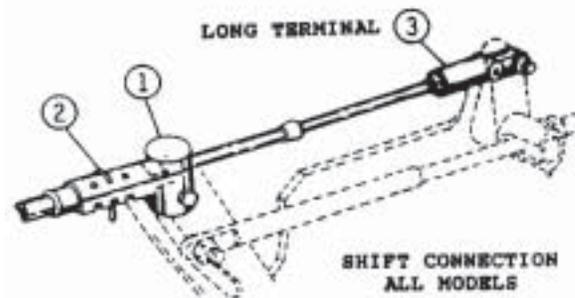


Figure 3

3. Replace the rod seal and jam nut on the cable. Thread the terminals onto the rod for shift and throttle. The cables are now ready to be installed on the engine.

NOTE:

For **shift** connection on all models, use the center slot. See Figure 3.
 For **throttle** connection on all models, use the slot nearest the anchor hole. See Figure 4.

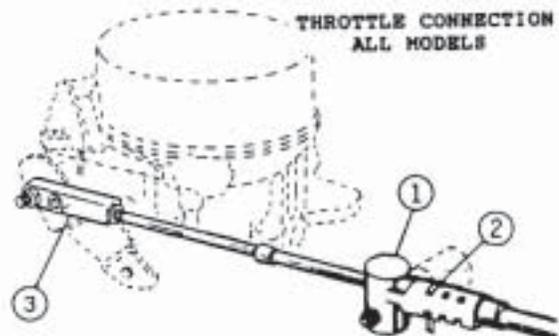


Figure 4

NOTE:

For V-8 Models Only: In order to get enough throttle travel in reverse when using the "MT-3" style control, the control hand lever must be placed in the vertical position at neutral detent and the cable terminal must be placed in the shorter hole on the carburetor arm.

NOTE:

After the final adjustment, lock the clip in place by **bending the extended tab of the clip over**. Do not bend over the tab until the final adjustment has been made on the engine.

NOTE:

Follow the manufacturer's instructions for complete installation adjustments.