TITLE:

DINO STEERING CAP

www.hardin-marine.com

2.91
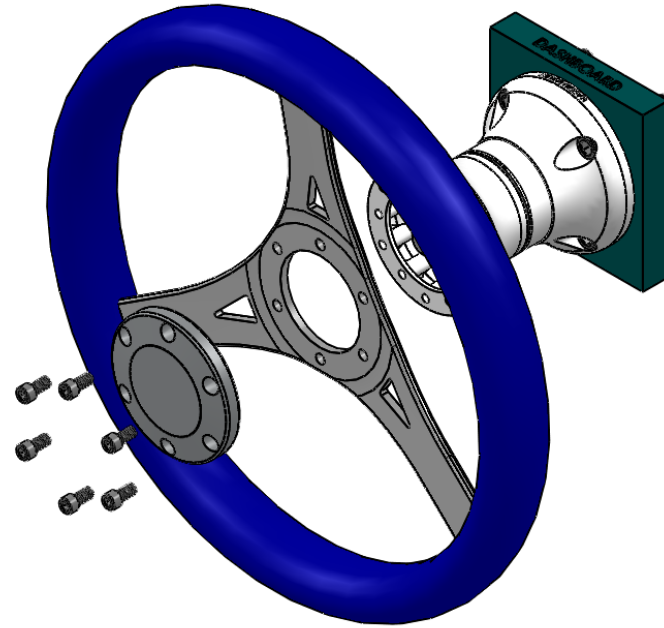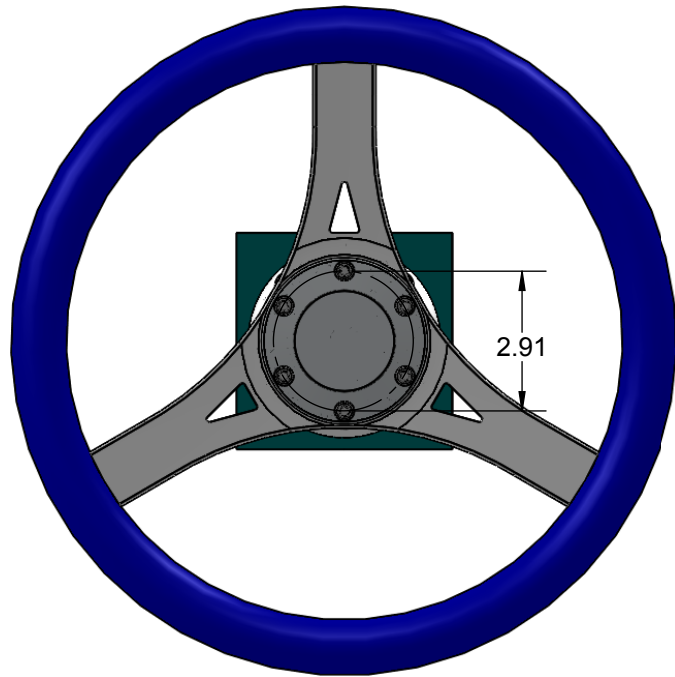
INSTALLATION INSTRUCTIONS:
1) ALIGN WHEEL WITH THE PROPER BOLT HOLES IN THE STEERING WHEEL ADAPTER.
2) APPLY BLUE LOCTITE TO THE SUPPLIED 1/4-20 BOLTS. TORQUE TO 120 IN. LBS..